FUJIFILM

Battery Charger AC-455F

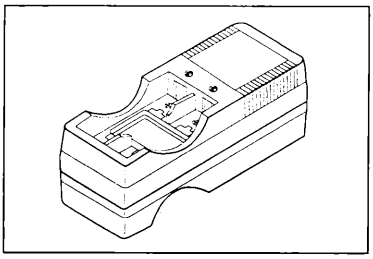

OPERATING INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS – This instruction manual contains important safety and operating instructions for battery charger Model AC-455F.
2. Before using battery charger, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using the battery.
3. CAUTION – Indoor use only. To reduce risk of injury, charge only FUJI FILM Ni-Cd rechargeable batteries.
   Other types of batteries may burst causing personal injury and damage.
4. Do not expose charger to rain or snow.
5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in fire, electric shock, or injury to persons.
6. An extension cord should not be used. Otherwise it may result in fire and electric shock.
7. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way: take it to a qualified serviceman.
8. Do not disassemble charger, take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in electric shock or fire.
9. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning.
10. Never alter plug provided - if it does not fit outlet, have proper installed by a qualified electrician. Improper connection can result in an electric shock.
11. Do not attempt to charge any other sizes than the one indicated in this manual.
12. It should never be used as the DC power source or any electrical equipment.

HOW TO USE

- The AC-455F can charge one to four AA FUJI FILM Ni-Cd rechargeable batteries.
- Place the FUJI FILM Ni-Cd rechargeable batteries into the charger, carefully matching the terminals to the corresponding battery poles. Otherwise they will not be recharged.
- Plug the charger into an AC outlet.
  The charging indicator(s) lights up to confirm the battery(ies) is(are) inserted correctly.
- Charging time: 1 or 2 "AA" size in a same compartment: 10-11 hours (Quick charging) (Fig. 1)
  4 "AA" batteries : 20-22 hours (Fig. 2)
- When recharging is completed, unplug the charger.
- Remove the recharged batteries.

Fig.1

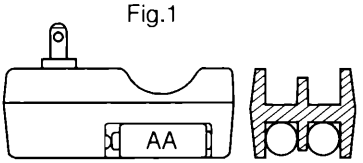

When charging 1 or 2 "AA" batteries

Fig.2

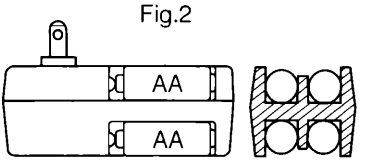

When charging 4 "AA" batteries

SPECIFICATIONS

Input	AC: 120V 60Hz
Output	DC: 1.2V 100mA
Compatible batteries	FUJI FILM Ni-Cd rechargeable batteries Ni-Cd batteries AA
Charging time	1-2 AAs: 10-11 hrs. 3-4 AAs: 20-22 hrs.
Dimensions (D) × (W) × (H)	41×45×107 mm
Weight	Approx. 160g (5.6oz)
Operating temperature range	0~40℃

FUJI PHOTO FILM CO., LTD.

26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106, Japan.

Printed on recycled paper.

BB05725-100(1)

Printed in Japan.

FGS-698009-SA